



NRAQ.E318630 - PROGRAMMABLE CONTROLLERS

FILE NO.: E318630

UL CATEGORY (CCN): NRAQ

DOCUMENT TYPE: Listing

PARENT CATEGORY (CCN): NIMX

Programmable Controllers

[See General Information for Programmable Controllers](#)

HOPE INDUSTRIAL SYSTEMS INC

E318630

1325 NORTHMEADOW PKWY
ROSWELL, GA 30076-3896 USA

Investigated to ANSI/UL 508

Accessories for use with HIS-WL Series for Suffix III, C only Model(s) *CP-BLNK-BLK, CP-CON-BL, CP-GL, CP-PG-BLK, CP-RG1-BLK, CP-RG2-BLK, CP-RG3-BLK, KVM2EXT-BLK-N4-PS2, KVM2EXT-BLK-N4-USB*

Accessories for use with HIS-WL Series for Suffix III, S only Model(s) *CP-BLNK-SS, CP-CON-S, CP-PG-SS, CP-RG1-SS, CP-RG2-SS, CP-RG3-SS, KVM-SS-N4X-USB, KVM2EXT-SS-N4X, KVM2EXT-SS-N4X-PS2*

Accessories for use with HIS-WL Series for suffix V, A and B Model(s) *CP-CON-BLK, CP-CON-SS*

KVM2EXT-BLK-N4 Accessories for use with HIS-WL Series for Suffix III, C only

Industrial monitors Model(s) *HIS-ML12- (a), HIS-ML12- followed by -S or -C, HIS-ML15- (a), HIS-ML15- followed by -S or -C, HIS-ML17- (a), HIS-ML17- followed by -S or -C, HIS-ML19- (a), HIS-ML19- followed by -S or -C, HIS-ML19.5- (a), HIS-ML19.5- followed by -S or -C, HIS-ML20- (a), HIS-ML20- followed by -S or -C, HIS-ML21- (a), HIS-ML21- followed by -S or -C, HIS-ML22- (a), HIS-ML22- followed by -S or -C, HIS-ML23- (a), HIS-ML23- followed by -S or -C, HIS-RL15-, HIS-RL15- (b), HIS-RL17-, HIS-RL17- (b), HIS-RL19-, HIS-RL19- (b), HIS-RL19.5-, HIS-RM15-, HIS-RM15- (b), HIS-RM17-, HIS-RM17- (b), HIS-RM19-, HIS-RM19- (b), HIS-RM19.5-, HIS-RM23-, HIS-WL15- (a), HIS-WL15- followed by S or C, HIS-WL17- (a), HIS-WL17- followed by S or C, HIS-WL19- (a), HIS-WL19- followed by S or C, HIS-WL19.5- (a), HIS-WL19.5- followed by S or C, HIS-WL22- (a), HIS-WL22- followed by S or C, HIS-WL23- (a), HIS-WL23- followed by S or C*

(a) - Followed by two alphanumeric, followed by A or B, or T followed by any alphanumeric.

(b) - Followed by two alphanumeric, followed by D or T, followed by any alphanumeric.