



# Installation Instructions

## CP-BLNK-BLK-N4 or CP-BLNK-SS-N4X


### Cover Plate with Pilot Hole

#### → IMPORTANT!


**FOLLOW THESE INSTRUCTIONS CAREFULLY IN ORDER TO GET A WATERTIGHT NEMA 12/4/4X SEAL. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD VOID THE WARRANTY IF WATER DAMAGE OCCURS.**

CP-BLNK series cover plates provide a pilot hole for easy integration of many different sizes and styles of conduit fittings. Ensure conduit and conduit fittings will provide a watertight NEMA 12/4/4X seal.


1. Drill Pilot Hole to recommended diameter provided by fitting manufacturer.

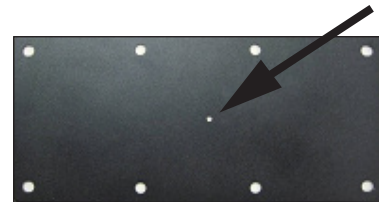


2. Install fitting onto the cover plate per manufacturer's instructions. Insure a watertight NEMA 12/4/4X seal.

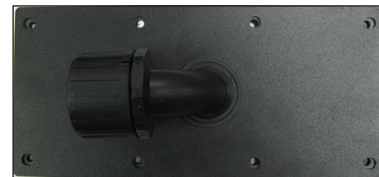

3. Route all needed cables through fittings.
4. Connect all cables to the monitor. Secure cables by completely turning all strain relief screw locks. Use the USB strain relief clip (provided) to secure USB cables.

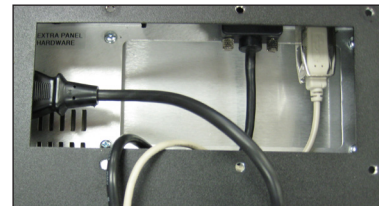

5. Position the cover plate on the rear cover of the monitor.

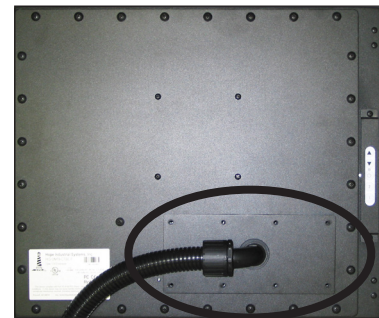

6. Install the provided eight sealing screws and tighten evenly until the gasket on the cover plate is 1/16" to 3/32" thick.

