



Installation Instructions

CP-BLNK-BLK-N4 or CP-BLNK-SS-N4X

Cover Plate with Pilot Hole

IMPORTANT!

FOLLOW THESE INSTRUCTIONS CAREFULLY IN ORDER TO GET A WATERTIGHT NEMA 12/4/4X SEAL. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD VOID THE WARRANTY IF WATER DAMAGE OCCURS.

CP-BLNK series cover plates provide a pilot hole for easy integration of many different sizes and styles of conduit fittings. Ensure conduit and conduit fittings will provide a watertight NEMA 12/4/4X seal.

1. Refer to Figure 1. Drill Pilot Hole to recommended diameter provided by fitting manufacturer.
2. Refer to Figure 2. Install fitting onto the cover plate per manufacturer's instructions. Insure a watertight NEMA 12/4/4X seal.
3. Route all needed cables through fittings.
4. Refer to Figure 3. Connect all cables to the monitor. Secure cables by completely turning all strain relief screw locks. Use the USB strain relief clip (provided) to secure USB cables. Secure AC power cable with supplied retaining clip.
5. Refer to Figure 4. Position the cover plate on the rear cover of the monitor.
6. Refer to Figure 5. Install the provided eight sealing screws and tighten evenly until the gasket on the cover plate is 1/16" to 3/32" thick.

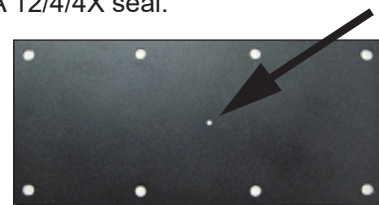


FIGURE 1

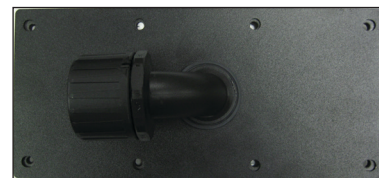


FIGURE 2



FIGURE 3

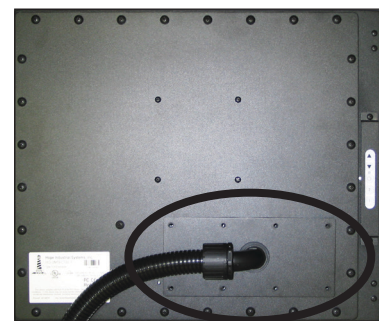


FIGURE 4

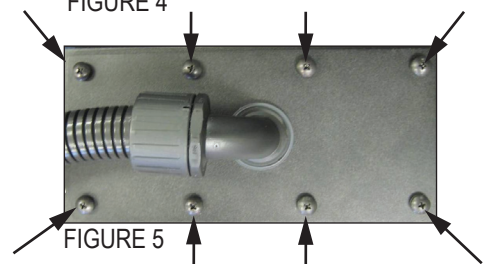


FIGURE 5