



Installation Instructions

VB-22A

Accessory Mounting Bracket for HIS-ML22 and HIS-ML23.8 Monitors

1. Lay the monitor face down on the edge of a bench. **Place a soft cloth or foam between the monitor and bench to prevent scratches.**
2. Place the Accessory Bracket onto the rear of the monitor as shown in Figure 1.
3. Install the provided four screws and lockwashers in the locations marked "A" in Figure 1.

FIGURE 1 – REAR VIEW OF ML22 MONITOR (FACE DOWN)

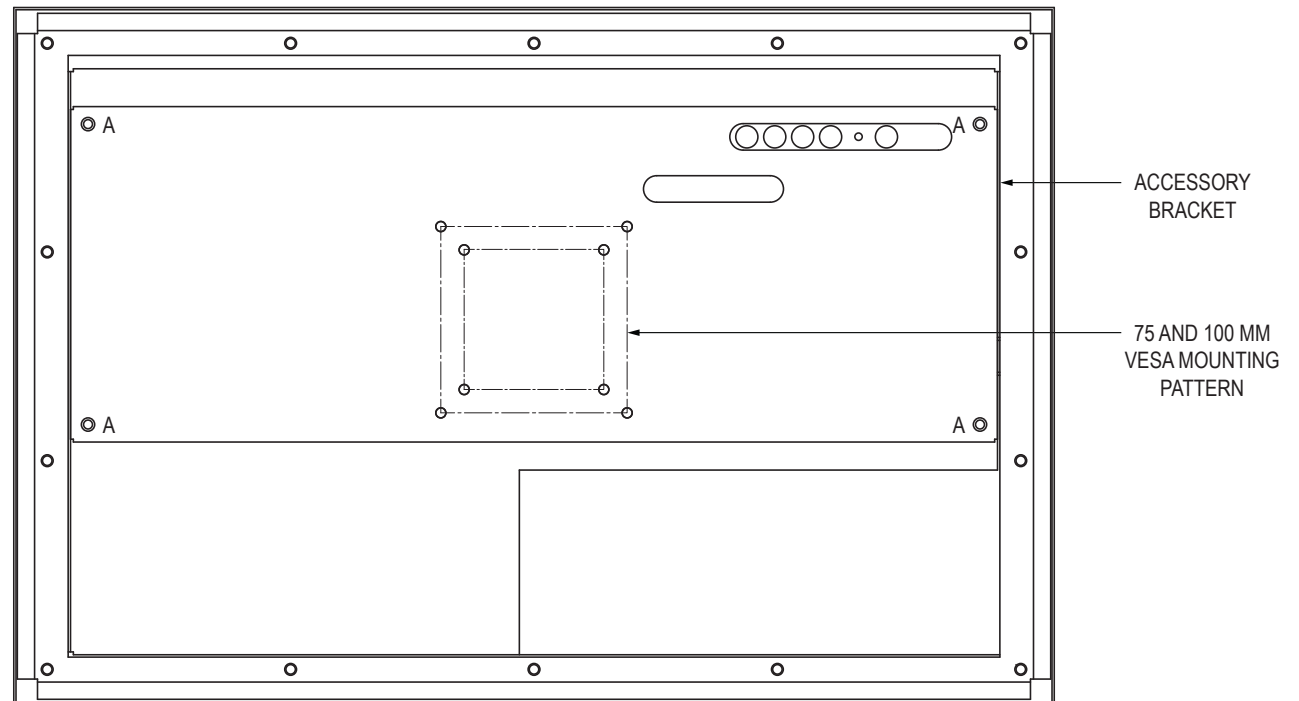


FIGURE 2 – BOTTOM VIEW

