



# Installation Instructions

## VB-12D

### Accessory Mounting Bracket for HIS-ML12 Monitors

1. Lay the monitor face down on the edge of a bench. **Place a soft cloth or foam between the monitor and bench to prevent scratches.**
2. Place the Accessory Bracket onto the rear of the monitor as shown in Figure 1.
3. Install the provided three screws and lockwashers in the locations marked "A" in Figure 1.

FIGURE 1 – REAR VIEW OF ML12 MONITOR (FACE DOWN)

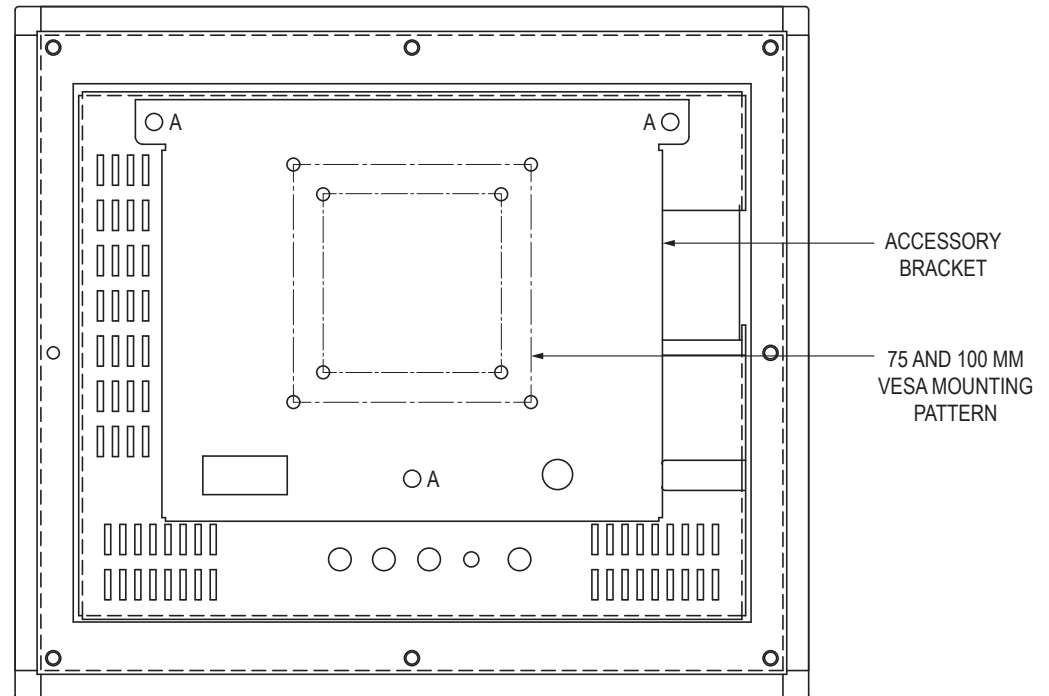


FIGURE 2 – BOTTOM VIEW

