



# Installation Instructions

## VB-17E

### Accessory Mounting Bracket for HIS-ML17 Monitors

1. Lay the monitor face down on the edge of a bench. **Place a soft cloth or foam between the monitor and bench to prevent scratches.**
2. Remove and set aside the twelve nuts from the locations marked "A" in Figure 1. Temporarily remove the collar from the rear cover of the monitor.
3. Remove and set aside the three screws from the locations marked "B" in Figure 1.  
**NOTE: If the chassis is moved while these three screws are removed, the monitor will become misaligned. Be careful not to move the chassis while screws are removed.**
4. Remove and discard the two screws from the locations marked "C" in Figure 1.
5. Place the Accessory Bracket onto the rear of the monitor as shown in Figure 1.
6. Reinstall the three screws that were removed in step 3 in the locations marked "B" in Figure 1.
7. Install the provided two screws and lockwashers in the locations marked "C" in Figure 1.
8. Unless you will be installing the monitor into a panel immediately, reinstall the collar using the twelve nuts that were removed in step 2 in the locations marked "A" in Figure 1.

FIGURE 1 – REAR VIEW OF ML17 MONITOR (FACE DOWN)

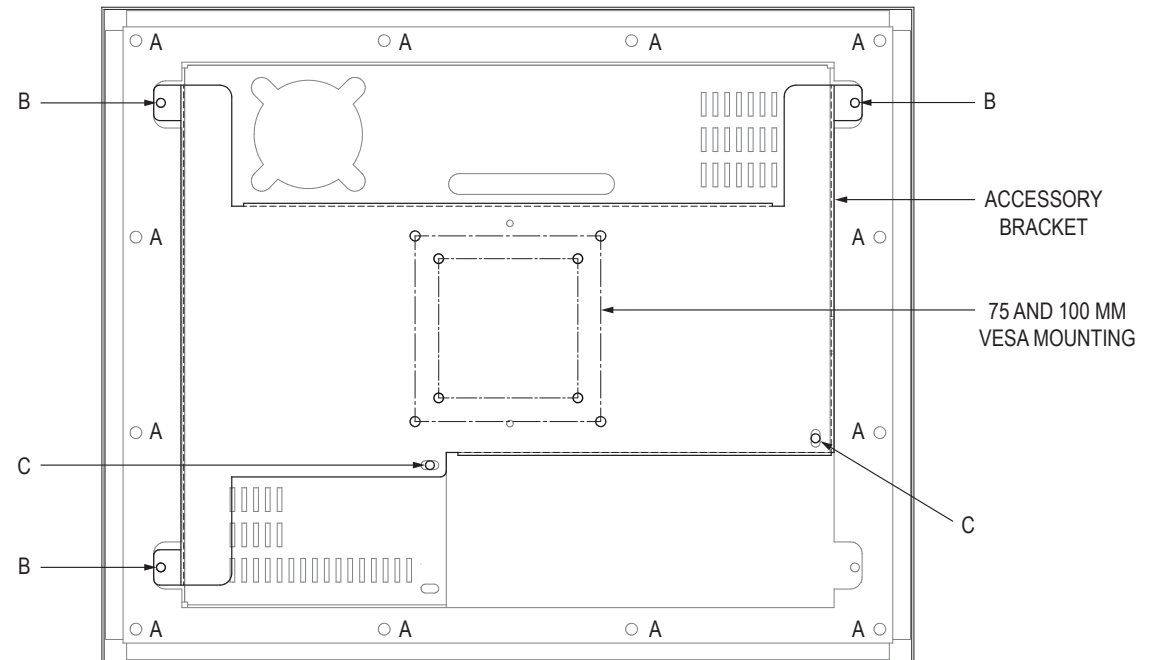


FIGURE 2 – BOTTOM VIEW

