



Installation Instructions

VB-15G/17F, and VB-20A

Accessory Mounting Bracket for HIS-ML15, HIS-ML17, HIS-ML19.5, and HIS-ML20 Monitors

1. Lay the monitor face down on the edge of a bench. **Place a soft cloth or foam between the monitor and bench to prevent scratches.**
2. On 15" and 17" monitors, remove and discard the screw from the bottom right location marked "A" in Figure 1.
3. Place the Accessory Bracket onto the rear of the monitor as shown in Figure 1.
4. Install the provided four screws and lockwashers in the locations marked "A" in Figure 1.

FIGURE 1 – REAR VIEW OF ML20 MONITOR (FACE DOWN)

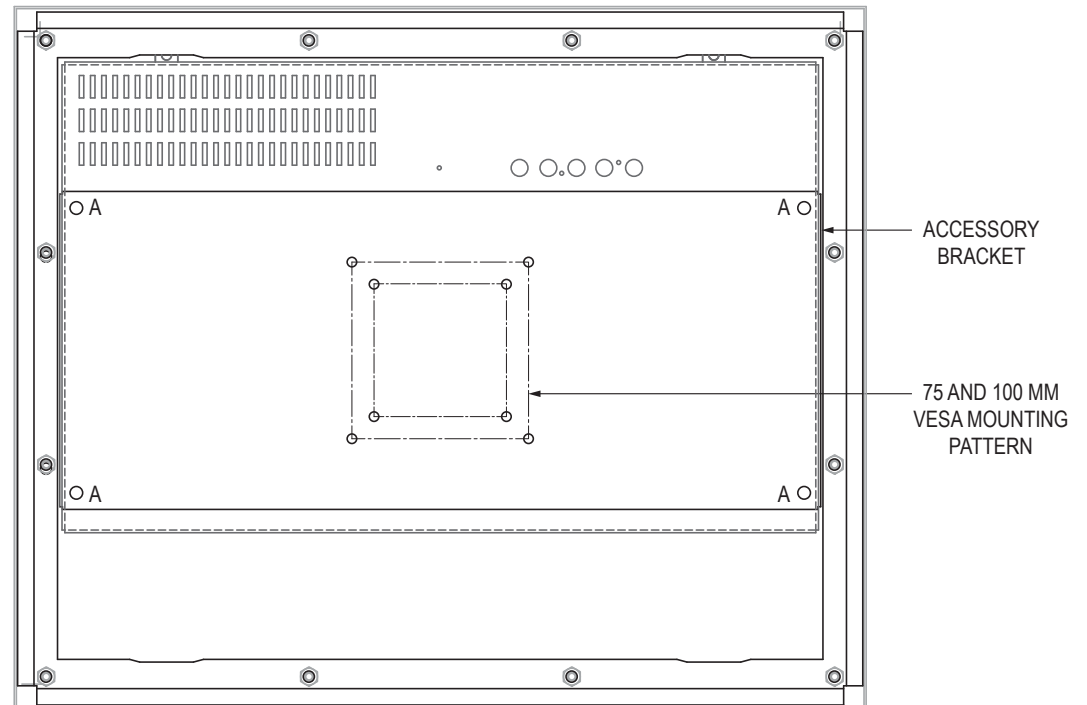


FIGURE 2 – BOTTOM VIEW

