




# Installation Instructions

## VESA Mounting Kit and Diagram for Hope Industrial Universal Mount Monitors

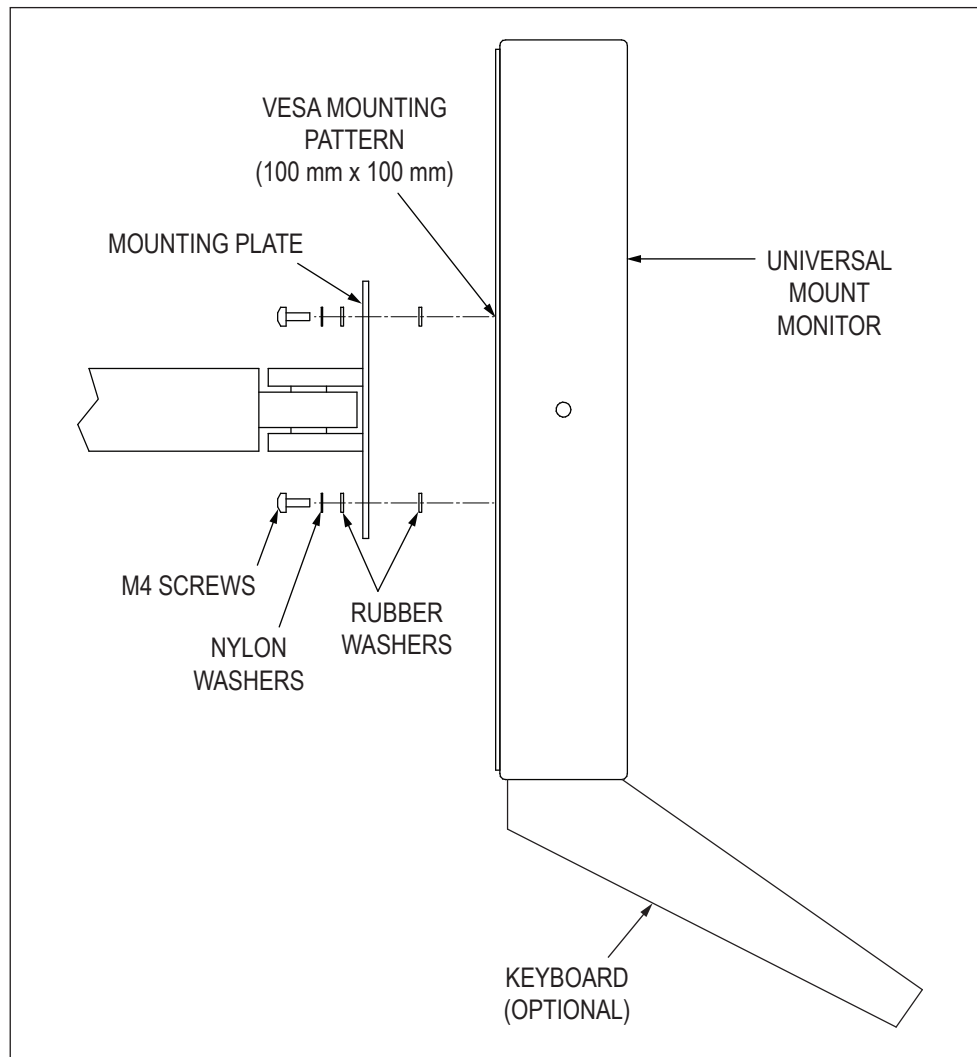

1. Refer to the drawing above.
2. Remove and discard the four screws and washers that are currently installed in the VESA mounting pattern on the rear of the Universal Mount monitor.
3. Install the VESA Mount using the provided four M4 screws, Nylon Washers, and Rubber Washers. There should be one Nylon Washer under each M4 screw head, and one Rubber Washer on each M4 screw on each side of the Mounting Plate.

**NOTE:** If using alternative screws, ensure they do not protrude into the enclosure more than 1/2" (12.7 mm).